

Montážní návod

(Montážny návod, Fitting instruction, Montageanleitung,
Istruzioni di montaggio, Monteringshandledning,
Asennusohje, Instruction de montage,
Montegehandleiding, Инструкция по установке)



Tažné zařízení Renault Scenic 10/1996->09/2000

Ťažné zariadenie
Towbars
Trekhaak
Anhängerkupplung de
Dispositif d'attelage
Equipo de remolque
Sprzęt holowniczy
Hinauslaitteet
Буксирное оборудование



výrobce / dodavatel
SVC Group s.r.o.

Odkaz na produkt:

<https://www.svcgroup.cz/tazne-zarizeni-sro-uby-pevny-skoda-rapid-monte-carlo-10-2012-2018-p7283-v960>



www.svcgroup.cz


Fitting instructions:

1. Loosen an exhaust pipe from a rubber bracket at 2.0 litre version. It is not necessary for the others. Dismantle a plastic cover from the bottom on the left side and make a slot (hole) according to a supplied figure.
2. Unstick an end cap of an assembling point from the back of the back side on the right side and put in the special nut (choose the kind according to the hole in a car body). Also unstick end caps from both beams in places of attaching points and put distance tubes with welded washers into them.
3. First of all attach the main beam of a coupling device from the bottom and then attach all the other lashes on a car (follow the figure (drawing) of a coupling device). Align everything and tighten it according to torque moments.
4. Put back the plastic cover and attach the exhaust pipe (at 2.0 litre version).

General instructions:

- 1 Remove insulating material on a car body in grips and joints of a tow bar with a car body. Clean all drilled holes with anticorrosive agent and remove all metal shavings.
- 2 Keep ball hitch and all moving parts clean and grease them, use on friction areas and use original supplied plastic covering caps.
- 3 Use supplied mechanical strenght jointing material.
- 4 It is recommended to retighten all fixing bolts and nuts after coupling device has been in use approximately 1000 km.
- 5 According to a law a ball hitch cannot cover a number plate.
- 6 Wiring of a tow bar must be up to a standard and car maker requirements (see a car manual or ask a car dealer).

The tow bar has been physically tested according to a regulation 94/20/EC and EHK UN No.55 and fulfils all prescribed ES regulations

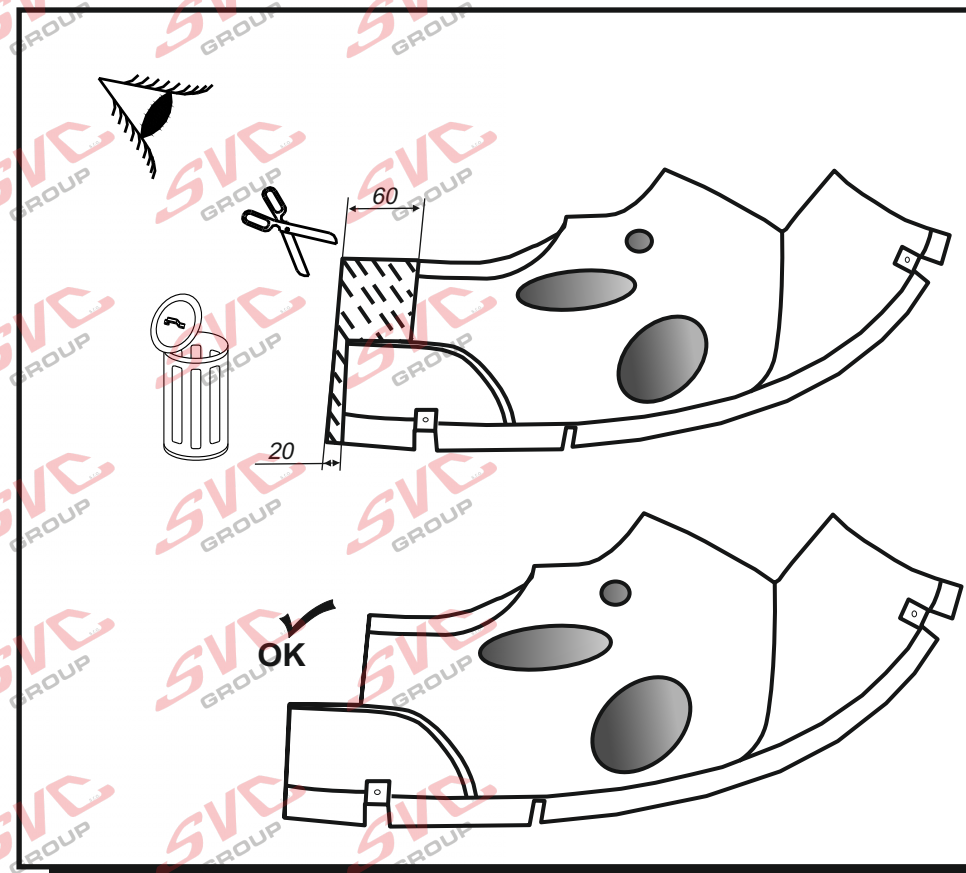

Nevíte si rady? Potřebujete poradit?

Náš zákaznický servis je vám k dispozici

 **+420 491 421 021**

 **svc@svcgroup.cz**



Opravdový specialista a Certifikovaný výrobce tažných zařízení
s největším sortimentem v ČR. Rodinná firma s více jak 30letou
ověřenou tradicí výroby, prodeje a montáže.

www.svcgroup.cz